

	SUITED FOR THE FOLLOWING PRODUCTS										USED FOR THE FOLLOWING CONNECTIONS										
	Emergency lift telephones					Floor displays and voice announcers					Suited for CANopen-Lift products	Connection (power/telephone etc.)	Connection external outputs	Connection inputs	Connection to voice station	Connection to hearing loop	Quick connection cable MX2 to MX3+	Connection CAN	Connection for computer configuration	Connection to IPS	GSM antenna cable
	GSM option GL1 and GL6	Suited for SL6+	Suited for MX3+	Suited for SL2	Suited for HL1	Suited for HL2	Suited for floor display FD4	Suited for floor display FD1600	Suited for voice announcer VAA4	Suited for voice announcer VAA4-SD											
Programming cable, USB-serial (*PCABLE-USB)		●	●	●			●		●									●			
Programming cable, USB (*PCABLE-USB02)	●	●						●		●								●			
GSM antenna cable SMA 5m (*GSM_ANTKABEL5M)	●	●																		●	
GSM antenna cable SMA 10m (*GSM_ANTKABEL10M)	●	●																		●	
Inductive loop cable (*INDUCTION-LOOP)					●	●								●							
Adapter cable MX2 to MX3+ (*RS2)			●												●						
Flat modular cable (*CABLE03)		●												●							
Connection kit KONE KRM (*CABLE07)		●	●	●								●	●	●							
Cable CAN CL/CL 5p (*CABLE09)										●						●		●			
IO cable 3P (*CABLE10)										●		●	●								
IO cable 4P (*CABLE11)										●		●	●								
Connection cable MX3+ (*CABLE12)			●									●									
Cable MX3+/SL6+ ext. outputs (*CABLE13)		●	●									●	●								
Connection cable MX3+ LTStat (*CABLE14)			●											●							
Adapter cable MX3+ to HL1 (*CABLE15)			●		●	●								●							
Flat cable JST 6p+2p/open (*CABLE18)		●												●							
Cable 4+4 to FD1600 (*CABLE19)							●						●								
MX3+ to Cibes cable (*CABLE21)			●									●	●								
MX3+ LED cable (*CABLE22)			●									●									
CANopen-Lift cable (*CABLE23)							●			●	●					●		●			
IO cable, JST to open end (*CABLE24)										●		●	●								
IO cable, 1000 mm (*CABLE25)										●		●	●								